



# Web Panel WP-156

Doc. Rev. 0.A

Doc. ID: 90207

This page has been intentionally left blank

## ▶ WEB PANEL WP-156 - USER GUIDE

### Disclaimer

Kontron would like to point out that the information contained in this user guide may be subject to alteration, particularly as a result of the constant upgrading of Kontron products. This document does not entail any guarantee on the part of Kontron with respect to technical processes described in the user guide or any product characteristics set out in the user guide. Kontron assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright or mask work right infringement unless otherwise specified. Applications that are described in this user guide are for illustration purposes only. Kontron makes no representation or warranty that such application will be suitable for the specified use without further testing or modification. Kontron expressly informs the user that this user guide only contains a general description of processes and instructions which may not be applicable in every individual case. In cases of doubt, please contact Kontron.

This user guide is protected by copyright. All rights are reserved by Kontron. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron. Kontron points out that the information contained in this user guide is constantly being updated in line with the technical alterations and improvements made by Kontron to the products and thus this user guide only reflects the technical status of the products by Kontron at the time of publishing.

Brand and product names are trademarks or registered trademarks of their respective owners.

©2019 by Kontron S&T AG

Kontron S&T AG

Lise-Meitner-Str. 3-5

86156 Augsburg

Germany

[www.kontron.com](http://www.kontron.com)

## Intended Use

**THIS DEVICE AND ASSOCIATED SOFTWARE ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE FOR THE OPERATION OF NUCLEAR FACILITIES, THE NAVIGATION, CONTROL OR COMMUNICATION SYSTEMS FOR AIRCRAFT OR OTHER TRANSPORTATION, AIR TRAFFIC CONTROL, LIFE SUPPORT OR LIFE SUSTAINING APPLICATIONS, WEAPONS SYSTEMS, OR ANY OTHER APPLICATION IN A HAZARDOUS ENVIRONMENT, OR REQUIRING FAIL-SAFE PERFORMANCE, OR IN WHICH THE FAILURE OF PRODUCTS COULD LEAD DIRECTLY TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE (COLLECTIVELY, "HIGH RISK APPLICATIONS").**

You understand and agree that your use of Kontron devices as a component in High Risk Applications is entirely at your risk. To minimize the risks associated with your products and applications, you should provide adequate design and operating safeguards. You are solely responsible for compliance with all legal, regulatory, safety, and security related requirements concerning your products. You are responsible to ensure that your systems (and any Kontron hardware or software components incorporated in your systems) meet all applicable requirements. Unless otherwise stated in the product documentation, the Kontron device is not provided with error-tolerance capabilities and cannot therefore be deemed as being engineered, manufactured or setup to be compliant for implementation or for resale as device in High Risk Applications. All application and safety related information in this document (including application descriptions, suggested safety measures, suggested Kontron products, and other materials) is provided for reference only.

## Revision History

Revision	Brief Description of Changes	Date of Issue	Author/ Editor
0.A	Initial Issue in English	2019-November-18	GUGMA

## Terms and Conditions

Kontron warrants products in accordance with defined regional warranty periods. For more information about warranty compliance and conformity, and the warranty period in your region, visit <http://www.kontron.com/terms-and-conditions>.

Kontron sells products worldwide and declares regional General Terms & Conditions of Sale, and Purchase Order Terms & Conditions. Visit <http://www.kontron.com/terms-and-conditions>.

For contact information, refer to the corporate offices contact information on the last page of this user guide or visit our website [CONTACT US](#).

## Customer Support

Find Kontron contacts by visiting: <http://www.kontron.com/support>.

## Customer Service

As a trusted technology innovator and global solutions provider, Kontron extends its embedded market strengths into a services portfolio allowing companies to break the barriers of traditional product lifecycles. Proven product expertise coupled with collaborative and highly-experienced support enables Kontron to provide exceptional peace of mind to build and maintain successful products.

For more details on Kontron's service offerings such as: enhanced repair services, extended warranty, Kontron training academy, and more visit <http://www.kontron.com/support-and-services/services>.

## Customer Comments

If you have any difficulties using this user guide, discover an error, or just want to provide some feedback, contact [Kontron support](#). Detail any errors you find. We will correct the errors or problems as soon as possible and post the revised user guide on our website.

# Symbols

The following symbols may be used in this user guide

## **⚠ DANGER**

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

## **⚠ WARNING**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

## **NOTICE**

NOTICE indicates a property damage message.

## **⚠ CAUTION**

CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



### **Electric Shock!**

This symbol and title warn of hazards due to electrical shocks (>60V) when touching products or parts of products. Failure to observe the precautions indicated and/or prescribed by the law may endanger your life/health and/or result in damage to your material.



### **ESD Sensitive Device!**

This symbol and title inform that the electronic boards and their components are sensitive to static electricity. Care must therefore be taken during all handling operations and inspections of this product in order to ensure product integrity at all times.



### **HOT Surface!**

Do NOT touch! Allow to cool before servicing.



### **Laser!**

This symbol inform of the risk of exposure to laser beam and light emitting devices (LEDs) from an electrical device. Eye protection per manufacturer notice shall review before servicing.



This symbol indicates general information about the product and the user guide.

This symbol also indicates detail information about the specific product configuration.



This symbol precedes helpful hints and tips for daily use.

## For Your Safety

Your new Kontron product was developed and tested carefully to provide all features necessary to ensure its compliance with electrical safety requirements. It was also designed for a long fault-free life. However, the life expectancy of your product can be drastically reduced by improper treatment during unpacking and installation. Therefore, in the interest of your own safety and of the correct operation of your new Kontron product, you are requested to conform with the following guidelines.

### High Voltage Safety Instructions

As a precaution and in case of danger, the power connector must be easily accessible. The power connector is the product's main disconnect device.

#### **CAUTION**

##### **Warning**

All operations on this product must be carried out by sufficiently skilled personnel only.

#### **CAUTION**



##### **Electric Shock!**

Before installing a non hot-swappable Kontron product into a system always ensure that your mains power is switched off. This also applies to the installation of piggybacks. Serious electrical shock hazards can exist during all installation, repair, and maintenance operations on this product. Therefore, always unplug the power cable and any other cables which provide external voltages before performing any work on this product.

Earth ground connection to vehicle's chassis or a central grounding point shall remain connected. The earth ground cable shall be the last cable to be disconnected or the first cable to be connected when performing installation or removal procedures on this product.

### Special Handling and Unpacking Instruction

#### **NOTICE**



##### **ESD Sensitive Device!**

Electronic boards and their components are sensitive to static electricity. Therefore, care must be taken during all handling operations and inspections of this product, in order to ensure product integrity at all times.

Do not handle this product out of its protective enclosure while it is not used for operational purposes unless it is otherwise protected.

Whenever possible, unpack or pack this product only at EOS/ESD safe work stations. Where a safe work station is not guaranteed, it is important for the user to be electrically discharged before touching the product with his/her hands or tools. This is most easily done by touching a metal part of your system housing.

It is particularly important to observe standard anti-static precautions when changing piggybacks, ROM devices, jumper settings etc. If the product contains batteries for RTC or memory backup, ensure that the product is not placed on conductive surfaces, including anti-static plastics or sponges. They can cause short circuits and damage the batteries or conductive circuits on the product.

## Lithium Battery Precautions

If your product is equipped with a lithium battery, take the following precautions when replacing the battery.

### ⚠ CAUTION

**Danger of explosion if the battery is replaced incorrectly.**

- ▶ Replace only with same or equivalent battery type recommended by the manufacturer.
- ▶ Dispose of used batteries according to the manufacturer's instructions.

## General Instructions on Usage

In order to maintain Kontron's product warranty, this product must not be altered or modified in any way. Changes or modifications to the product, that are not explicitly approved by Kontron and described in this user guide or received from Kontron Support as a special handling instruction, will void your warranty.

This product should only be installed in or connected to systems that fulfill all necessary technical and specific environmental requirements. This also applies to the operational temperature range of the specific board version that must not be exceeded. If batteries are present, their temperature restrictions must be taken into account.

In performing all necessary installation and application operations, only follow the instructions supplied by the present user guide.

Keep all the original packaging material for future storage or warranty shipments. If it is necessary to store or ship the product then re-pack it in the same manner as it was delivered.

Special care is necessary when handling or unpacking the product. See Special Handling and Unpacking Instruction.

## Quality and Environmental Management

Kontron aims to deliver reliable high-end products designed and built for quality, and aims to complying with environmental laws, regulations, and other environmentally oriented requirements. For more information regarding Kontron's quality and environmental responsibilities, visit <http://www.kontron.com/about-kontron/corporate-responsibility/quality-management>.

## Disposal and Recycling

Kontron's products are manufactured to satisfy environmental protection requirements where possible. Many of the components used are capable of being recycled. Final disposal of this product after its service life must be accomplished in accordance with applicable country, state, or local laws or regulations.

## WEEE Compliance

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to:

- ▶ Reduce waste arising from electrical and electronic equipment (EEE)
- ▶ Make producers of EEE responsible for the environmental impact of their products, especially when the product become waste
- ▶ Encourage separate collection and subsequent treatment, reuse, recovery, recycling and sound environmental disposal of EEE
- ▶ Improve the environmental performance of all those involved during the lifecycle of EEE



**Environmental protection is a high priority with Kontron.**

**Kontron follows the WEEE directive**

**You are encouraged to return our products for proper disposal.**



# Table of Contents

<b>Symbols</b> .....	<b>6</b>
<b>For Your Safety</b> .....	<b>7</b>
High Voltage Safety Instructions .....	7
Special Handling and Unpacking Instruction .....	7
Lithium Battery Precautions.....	8
<b>General Instructions on Usage</b> .....	<b>8</b>
<b>Quality and Environmental Management</b> .....	<b>8</b>
Disposal and Recycling.....	8
WEEE Compliance.....	8
<b>Table of Contents</b> .....	<b>9</b>
<b>List of Tables</b> .....	<b>10</b>
<b>List of Figures</b> .....	<b>10</b>
<b>1/ Product overview</b> .....	<b>11</b>
<b>2/ Technical data</b> .....	<b>12</b>
2.1. Operating system.....	12
2.2. Dimensions and weight.....	12
2.3. Environmental conditions .....	12
2.4. Power supply.....	13
2.5. Materials .....	13
2.6. Accessories.....	13
<b>3/ Design and function</b> .....	<b>14</b>
3.1. Description of function.....	14
3.1.1. LCD display .....	14
3.1.2. Touchscreen capacitive.....	14
3.1.3. Processor board.....	14
3.1.4. MicroSD-Card.....	14
3.1.5. Backlight .....	14
3.1.6. Ethernet NET1.....	15
3.1.7. USB.....	15
3.2. Connectors.....	16
3.2.1. Functional earth.....	17
3.2.2. Power supply Connector X1.....	17
3.2.3. Ethernet Connector X5.....	18
<b>4/ Assembly and installation</b> .....	<b>19</b>
4.1. Mounting instructions.....	19
<b>5/ Commissioning</b> .....	<b>20</b>
5.1. Power supply .....	20
5.2. Grounding.....	20
5.3. System Configuration.....	20
5.4. HTML5 Browser .....	20
5.5. iniNet Micro-Browser.....	21
5.6. Backup/Restore the system (Live System).....	21
<b>6/ Operation</b> .....	<b>22</b>
<b>7/ Maintenance</b> .....	<b>23</b>
7.1. Cleaning.....	23
<b>8/ Malfunctions</b> .....	<b>24</b>

9/ Decommissioning and disposal..... 25

10/Technical drawings..... 26

10.1. Mounting cut-out and device views ..... 26

11/ Technical Support..... 29

11.1. Warranty..... 29

11.2. Returning Defective Merchandise ..... 30

Appendix A: List of Acronyms..... 31

About Kontron ..... 32

## List of Tables

Table 1: Versions..... 11

Table 2: Detail configuration of the product versions: ..... 11

Table 3: Accessories for the WP-156 Web Panel..... 13

Table 4: Interfaces ..... 16

Table 5: Power supply Connector X1..... 17

Table 6: Ethernet Connectors X5 and X6 ..... 18

Table 7: Malfunctions..... 24

Table 8: List of used Acronyms..... 31

## List of Figures

Figure 1: MicroSD-Card..... 14

Figure 2: Interfaces bottom view ..... 16

Figure 3: Interfaces side view..... 16

Figure 4: Functional earth ..... 17

Figure 5: Mounting in the front of the switch cabinet..... 19

Figure 6: Mounting cut-out ..... 26

Figure 7: Front view ..... 27

Figure 8: Rear view..... 27

Figure 9: Side view from below..... 28

## 1/ Product overview

The WP-156 Web Panel is designed as an operating panel for industrial applications and building automation. As standard, the panel has a capacitive multitouch display with a glass front and a very slim, high-quality metal frame. On the back side, the panel has a robust stainless steel housing.

The WP-156 Panel has a 15.6" WXGA color TFT touch panel with 1366 x 768 pixels and dimmable LED backlight. It is equipped with an ARM Cortex-A9 low-power embedded RISC controller with one or two processor cores. The WP-156 can comprise one microSD slot, one 10/100 MBit Ethernet interface and two USB2.0 host interfaces.

Linux is used as the operating system. The panel is available with either a Chromium based HTML5 web browser or the "Microbrowser" from iniNet.

This manual is applicable to the following versions:

**Table 1: Versions**

Article No.	Name	Versions
11386	WP-156g 32-1230	15.6-inch Web Panel i.MX6 Dual Core with aluminum frame

**Table 2: Detail configuration of the product versions:**

Version	11386			
15.6" WXGA (1366 x 768) Colour-TFT	x			
Capacitive touch with glass and aluminum front	x			
Capacitive touch with glass and stainless steel front				
800 MHz i.MX6 Single-Core				
800 MHz i.MX6 Dual-Core	x			
1 MByte serial NOR Flash	x			
512 MByte NAND Flash	x			
1 GByte RAM	x			
4 GByte eMMC Flash				
8 kByte FRAM				
microSD-Card slot	x			
NET1 10/100 MBit Ethernet	x			
NET2 10/100 MBit Ethernet				
2x USB Host (USB1, USB2)	x			
Linux Distribution	x			

## 2/ Technical data

Depending on the version, the WP-156 Web Panel can have the following properties (existing versions see 1/):

- ▶ 15.6" WXGA Colour-TFT Display with 1366 x 768 pixels, 24 Bit RGB via LVDS. Brightness typ. 400 cd/m<sup>2</sup>, wide viewing angle from all sides typ. 85°/80°/85°/85°
- ▶ Capacitive multi touch screen
- ▶ Glass front inserted in a milled aluminum frame or stainless steel frame
- ▶ Processor NXP ARM Cortex A9, 800 MHz i.MX6 Single or Dual Core CPU
- ▶ Up to 512 MByte NAND Flash
- ▶ 4-16 GByte eMMC Flash
- ▶ 1 MByte serial NOR Flash
- ▶ 1 GByte dynamic RAM
- ▶ Slot for microSD FlashCards up to 2 GByte and SDHC-Cards up to 32 GByte
- ▶ LED backlight dimmable via software
- ▶ one 10/100 MBit Ethernet interface on RJ45 (8P8C) connector
- ▶ up to two USB Host interfaces on 4-pol. USB plug type A
- ▶ Power supply 24 VDC ±20%, on 3-pin. Phoenix connector

### 2.1. Operating system

The operating system is embedded Linux (Yocto Distribution).

### 2.2. Dimensions and weight

External dimensions: W \ H \ D: 404.5 x 253.5 x 59.4 mm

Display size: W \ H: 344.2 x 193.4 mm, 15.6" diagonal

Mounting depth: 53 mm

Weight: 3.4 kg

### 2.3. Environmental conditions

List of permissible ambient conditions for the operation of the product.

Ambient temperature operation: 0 ... +55 °C

Ambient temperature storage: -20 ... +70 °C

Humidity: 10 - 90 % (non-condensing)

Atmosphere: free of corrosive or explosive gases

Protection class: Front: IP65, rear: IP20

EMC with correct wiring and shielding of the interfaces:

- ▶ according to EN 61000-6-2 Immunity
- ▶ according to EN 61000-6-4 Emission

**⚠ DANGER****No use in potentially explosive areas!**

Use in hazardous areas can result in death, serious injury or considerable damage to property.

The device is not designed for use in hazardous areas and does not have the appropriate approvals.

## 2.4. Power supply

Supply voltage: +24 VDC  $\pm$ 20 %

Current consumption: typ. 700 mA

Power consumption: typ. 16.8 VA

Recommended design of the power supply unit:

Voltage/ output power: 24 VDC / min. 30 W

Ripple: max. 200 mV p-p

Operate the device exclusively with a SELV (Safety Extra Low Voltage) voltage source which fulfils the requirements of an LPS (Limited Power Source) according to DIN EN 60950-1.

**NOTICE**

The power consumption depends on the configuration as well as the type and number of active interfaces..

## 2.5. Materials

The following materials are used for the housing of the WP-156:

Housing Rear: Stainless steel

Housing front: aluminium or stainless steel

Glass front: chemically toughened glass

## 2.6. Accessories

Table 3: Accessories for the WP-156 Web Panel

Article No.	Designation	Comment
90188	Handbuch Web Panel WP-156	Deutsches Handbuch
90196	System Manual Linux	Deutsches Handbuch
90207	User Guide Web Panel WP-156	English manual
90208	System Manual Linux	English manual

## 3/ Design and function

### 3.1. Description of function

#### 3.1.1. LCD display

The active colour TFT LCD 15.6" display with WXGA resolution (1366 x 768) is connected to the processor board via an internal LVDS interface.

#### 3.1.2. Touchscreen capacitive

The integrated capacitive touchscreen is connected to the processor board via an internal interface.

#### **CAUTION**

---

**Damage to the screen, caused by any impact with a hard object, could lead to injury.**  
Operate the touch screen only with finger or touch pen.

---

#### 3.1.3. Processor board

The single board computer used within the WP-156 is based on an i.MX6 ARM Cortex-A9 processor design, single or dual core. All of the specified I/O features are fully integrated.

Flash-ROM, fast boot serial NOR Flash, DDR3 DRAM main memory and non-volatile data memory SRAM components are used as standard. All devices are soldered down for high reliability.

#### 3.1.4. MicroSD-Card

The microSD card slot X3 integrated on the base module allows the use of SD cards up to 2 GByte and SDHC cards up to 32 GByte.

Figure 1: MicroSD-Card



The microSD card must be inserted with contacts to the rear (towards the rear of the device) as shown in the figure above.

#### 3.1.5. Backlight

The brightness of the backlight can be adjusted via the system configuration or via software via a Linux command.

### 3.1.6. Ethernet NET1

The Ethernet interface NET1 is operated via an Ethernet controller at the RMII interface of the processor. The electrically isolated 10/100 Mbit Ethernet interface is available on the RJ45 (8P8C) connector X5. Two LEDs signal the interface status. The green LED lights up when the link is active and flashes during data transmission. The yellow LED lights up for data transmission at 100Mb/s.

### 3.1.7. USB

The processor board provides two USB 2.0 host interfaces. The signals are routed to the USB type A connector X9.

### 3.2. Connectors

The Web Panel has the following Interfaces:

Table 4: Interfaces

Connector	Type	Purpose
X1	3-pole pluggable terminal pitch 5 mm for 24 VDC supply	PWR
X3	MicroSD Card Slot	SD
X5	RJ45 (8P8C) Connector for Ethernet, horizontal	ENET
X9	Double-level USB Host connector type A, horizontal	USB

Figure 2: Interfaces bottom view



Figure 3: Interfaces side view






### 3.2.1. Functional earth

For the grounding of the device see notes in chapter 5.2

Figure 4: Functional earth

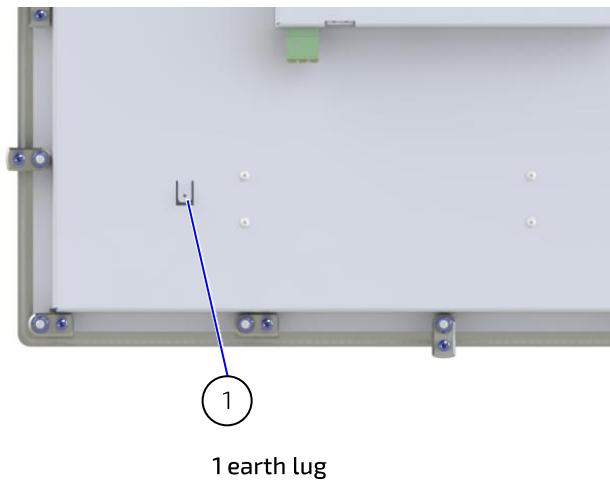

### 3.2.2. Power supply Connector X1

Table 5: Power supply Connector X1

Pin	Signal	Type	Comment
1	FE		Functional earth
2	0V	PWR	Power supply 0 Volt DC
3	24V	PWR	Power supply +24 VDC ±20%

Cable (acc. to chapter 2.3/ EMC): max. 3 m, unshielded

Connector Type: Phoenix MSTBA 2.5/3-G – 1757488

Mating connector: Phoenix FKCN 2.5/ 3-ST– 1732755 (included in delivery)

Associated permissible cable cross-sections:

- ▶ Conductor cross-section min: 0.5 mm<sup>2</sup> (corresponds AWG 24)
- ▶ Conductor cross-section max: 1.5 mm<sup>2</sup> (corresponds AWG 16)

The panel must be grounded via the functional earth connection of the power supply connector X1 with low impedance. See chapter 5.2

### 3.2.3. Ethernet Connector X5

Cable (according to chapter 2.3/ EMC): max. 30 m, shielded, Cat-5e

Table 6: Ethernet Connectors X5 and X6

Pin	Signal	Type	Comment
1	TX+	OUT	Ethernet Transmit data +
2	TX-	OUT	Ethernet Transmit data -
3	RX+	IN	Ethernet Receive data +
4			Reserved
5			Reserved
6	RX-	IN	Ethernet Receive data -
7			Reserved
8			Reserved

## 4/ Assembly and installation

Prior to commissioning, the temperature of the unit must be adjusted to the room temperature.

### **⚠ WARNING**

#### **Observance of the standards and regulations of the country of destination**

Improper installation may result in death, serious injury or serious damage to property. The device must be installed in machines or systems in compliance with all standards and regulations applicable in the countries of destination. Appropriate measures to meet such requirements (e.g. regarding EMC, ESD, etc.) must be taken by the manufacturer of these machines or systems.

### **⚠ WARNING**

#### **Danger due to malfunctions due to improper earthing of the device.**

This can result in death, serious injury or considerable damage to property. The device must be properly earthed.

### **NOTICE**

#### **Damage to plugs or cables due to improper handling when plugging in and unplugging out**

Material damage to cables, plugs and other plant components can result. Always hold the plug when plugging and unplugging a cable.

### 4.1. Mounting instructions

1. Insert the device from the front into the cut-out of the control cabinet and push it carefully until it is fully inserted.
2. Swivel out the mounting elements on the rear side so that the fixing screws are above the cabinet plate.
3. Tighten the fixing screw at the first mounting element in a corner until it presses on the cabinet plate.
4. repeat procedure 3) for opposite mounting element
5. repeat procedure 3) for the remaining mounting elements.

Figure 5: Mounting in the front of the switch cabinet



## 5/ Commissioning

### **NOTICE**

#### **Removal of the protective film by pulling it off sideways**

For easy removal, pull off the protective foil on the front of the device to the side.

### 5.1. Power supply

The WP-156 Web Panel is operated with 24 VDC. The power supply must be connected to connector X1. See section. 3.2.2.

Voltage level and power consumption see Chap. 2.4.

### 5.2. Grounding

The panel must be grounded via the functional earth connection of the power supply connector X1 with sufficiently low impedance ( $< 1 \text{ Ohm}$ ) to avoid possible transmitted interference from signal cables or external assemblies. Recommended cable cross-section is  $1.5 \text{ mm}^2$ .

In addition, the panel can optionally be grounded via the ground lug on the rear of the housing. For this optional grounding, use a  $6.3 \times 0.8 \text{ mm}$  flat receptacle and widen it slightly with a slotted screwdriver so that it expands to  $1 \text{ mm}$ .

### 5.3. System Configuration

The system configuration feature provides an easy to use interface for setting up the device. This can be selected locally on the device at startup in a selection menu of the integrated web browser or called via a web browser on another device that is connected to the Panel via Ethernet.

The clear menu structure makes it possible to quickly find the numerous setting options such as network settings, URL, CODESYS, display, FTP, IP-Tables, screensaver, web browser settings, passwords, diagnostics, etc.

Default IP addresses for panel access:

Ethernet 1: 192.168.1.100 (Subnet: 255.255.255.0)

Ethernet 2: 192.168.1.101 (Subnet: 255.255.255.0)

Default passwords (factory setting):

- ▶ User: root
- ▶ Password: root

A detailed description of the settings and functions can be found in the System Manual Linux. See Chap. 2.6 Accessories

The System Manual is also integrated in the system configuration of the device.

### 5.4. HTML5 Browser

The Chromium based HTML5 browser allows the display of web pages or a CODESYS V2.3/V3 WebVisu. The URL and the device IP address are set via the system configuration, via an own web server on an external web browser or via a script file on a connected USB stick.

## 5.5. iniNet Micro-Browser

The optional integrated Micro-Browser from iniNet allows the efficient display of a CODESYS V2.3/V3 WebVisu or the HMI solution SpiderControl from iniNet.

The settings are made directly at startup via the configuration menu of the micro-browser.

## 5.6. Backup/Restore the system (Live System)

The Backup/Restore function (Live System) allows easy backup and restore of the complete device via USB stick or SD card.

With a backup of the system, the devices can be reset to a defined state or even cloned.

The backup/restore function is integrated in the system configuration and can be accessed directly via the selection menu.

In addition, the live system for the backup/restore function can be requested free of charge from Kontron Electronics AG at <http://www.kontron-electronics.ch> on request.

## 6/ Operation

The panel does not have its own on/off switch and starts automatically when the power supply is switched on.

The panel is operated via the touch screen.

---

**NOTICE**

**Damage to the touch screen due to improper operation with inadmissible objects.**

Operation with inadmissible sharp or hard objects can cause scratches and damage to the touch screen.

The touch screen may only be operated with a finger or touch pen.

---

## 7/ Maintenance

There is no maintenance interval prescribed by the manufacturer of the product.

### 7.1. Cleaning

The device can be cleaned as required. There is no cleaning interval prescribed by the manufacturer of the product.

Since the touch display is touch-sensitive, the panel must be switched off during cleaning.

A soft cleaning cloth with household cleaning agent for glass surfaces is recommended for cleaning the glass panel front. Do not use caustic cleaning agents, abrasive cleaners or hard objects that could cause scratches.

---

**NOTICE****Penetration of liquids during cleaning**

Damage to property or destruction of the device may result.

When cleaning the panel front, make sure that only the front side of the panel is cleaned and that no liquids get to other housing parts.

---

## 8/ Malfunctions

Table 7: Malfunctions

Malfunction	Possible cause	Recommended action
No function	No power supply to the device	Check whether the power supply cable is correctly plugged in. Check pin assignment. Measure supply voltage.
Interface function impaired	Interface cable not plugged in correctly	Check whether all interface cables are plugged in correctly and the pin assignment is correct.
Touch screen function faulty	No grounding of the device	Check whether the grounding is correctly connected.

### **NOTICE**

#### **Loss of warranty due to manipulation of the device**

Repairs and other manipulations of the device may only be carried out by the manufacturer. In particular, opening the device is prohibited. Otherwise any warranty will become void.



## 9/ Decommissioning and disposal

### **NOTICE**

---

#### **Disposal of electrical material and batteries**

Electrical appliances and batteries must be disposed of in accordance with local regulations. If necessary, contact your local waste disposal company for information. Do not throw devices into the household waste and do not burn them.

Remove the backup battery from the device and dispose of it separately.

---

## 10/ Technical drawings

### 10.1. Mounting cut-out and device views

Figure 6: Mounting cut-out

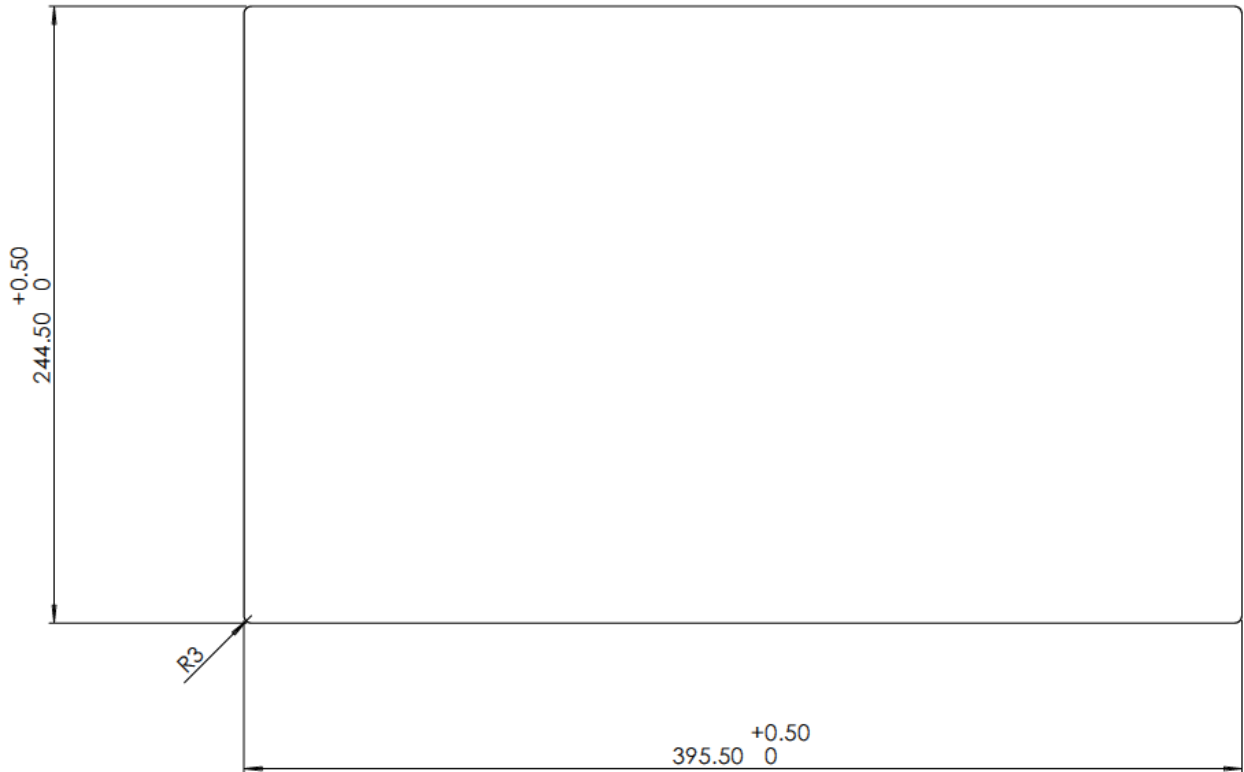



Figure 7: Front view



Figure 8: Rear view



Figure 9: Side view from below

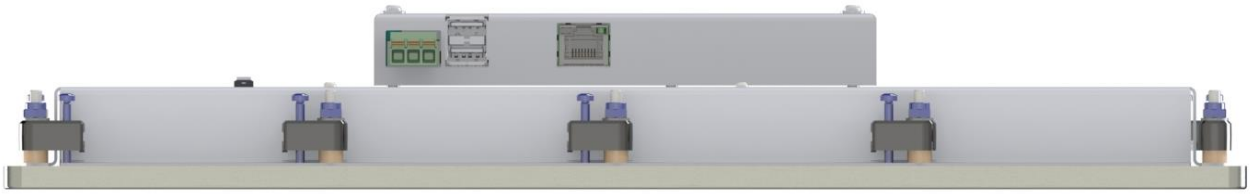

## 11/Technical Support

For technical support contact our Support department:

- ▶ E-mail: support@kontron.com
- ▶ Phone: +49-821-4086-888

Make sure you have the following information available when you call:

- ▶ Product ID Number (PN),
- ▶ Production batch or Serial Number (SN)



---

**The numbers can be found on the Type Label, located on the product's rear side.**

---

Be ready to explain the nature of your problem to the service technician.

### 11.1. Warranty

Due to their limited service life, parts that by their nature are subject to a particularly high degree of wear (wearing parts) are excluded from the warranty beyond that provided by law. This applies to the CMOS battery, for example.



---

**If there is a protection label on your product, then the warranty is lost if the product is opened.**

---

## 11.2. Returning Defective Merchandise

All equipment returned to Kontron must have a Return of Material Authorization (RMA) number assigned exclusively by Kontron. Kontron cannot be held responsible for any loss or damage caused to the equipment received without an RMA number. The buyer accepts responsibility for all freight charges for the return of goods to Kontron's designated facility. Kontron will pay the return freight charges back to the buyer's location in the event that the equipment is repaired or replaced within the stipulated warranty period. Follow these steps before returning any product to Kontron.

1. Visit the RMA Information website:

<http://www.kontron.com/support-and-services/support/rma-information>

Download the RMA Request sheet for **Kontron Europe GmbH** and fill out the form. Take care to include a short detailed description of the observed problem or failure and to include the product identification Information (Name of product, Product number and Production batch or Serial number). If a delivery includes more than one product, fill out the above information in the RMA Request form for each product.

2. Send the completed RMA-Request form to the fax or email address given below at Kontron Europe GmbH. Kontron will provide an RMA-Number.

Kontron Europe GmbH  
RMA Support  
Phone: +49 (0) 821 4086-0  
Fax: +49 (0) 821 4086 111  
Email: [service@kontron.com](mailto:service@kontron.com)

3. The goods for repair must be packed properly for shipping, considering shock and ESD protection.



---

**Goods returned to Kontron Europe GmbH in non-proper packaging will be considered as customer caused faults and cannot be accepted as warranty repairs.**

---

4. Include the RMA-Number with the shipping paperwork and send the product to the delivery address provided in the RMA form or received from Kontron RMA Support.

## Appendix A: List of Acronyms

Table 8: List of used Acronyms

WP	Web Panel
EMC	Electromagnetic compatibility; interference immunity to electrical or electromagnetic influences
ESD	Electrostatic Discharge; electrostatic discharge, high electrical voltage pulse
HMI	Human Machine Interface; Interface between machine and user
SELV	Safety Extra Low Voltage
LPS	Limited Power Source



## About Kontron

Kontron is a global leader in Embedded Computing Technology (ECT). As a part of technology group S&T, Kontron offers a combined portfolio of secure hardware, middleware and services for Internet of Things (IoT) and Industry 4.0 applications. With its standard products and tailor-made solutions based on highly reliable state-of-the-art embedded technologies, Kontron provides secure and innovative applications for a variety of industries. As a result, customers benefit from accelerated time-to-market, reduced total cost of ownership, product longevity and the best fully integrated applications overall. For more information, please visit: [www.kontron.com](http://www.kontron.com)



## Global Headquarters

### Kontron S&T AG

Lise-Meitner-Str. 3-5  
86156 Augsburg  
Germany  
Tel.: +49 821 4086-0  
Fax: +49 821 4086-111  
[info@kontron.com](mailto:info@kontron.com)